



1000™ 1200™ 2000™ 2200™

GRILL OWNER'S GUIDE

Thank you for purchasing a Weber® grill. Take a few minutes and protect it by registering your product online at www.weber.com.

⚠ DANGER

If you smell gas:

- Shut off gas to the appliance.
- Extinguish any open flames.
- Open lid.
- If odour continues, keep away from the appliance and immediately call your gas supplier or your fire department.

Leaking gas may cause a fire or explosion which can cause serious bodily injury, death, or damage to property.

⚠ DANGER

- Never operate this appliance unattended.
- Do not use grill within 610 mm (2 ft) of any combustible material. Combustible materials include, but are not limited to wood or treated wood decks, patios or porches.
- Never operate this appliance within 7.5 m (25 ft) of any flammable liquid.
- If a fire should occur, keep away from the appliance and immediately call your fire department. Do not attempt to extinguish an oil or grease fire with water.

Failure to follow these instructions could result in fire, explosion or burn hazard, which could cause property damage, personal injury or death.

⚠ **WARNING:** Carefully follow all leak-check procedures in this Owner's Guide prior to grill operation. Do this even if the grill was dealer-assembled.

⚠ **WARNING:** Do not ignite this appliance without first reading the BURNER IGNITION sections of this Owner's Guide.

THIS GAS APPLIANCE IS DESIGNED FOR OUTDOOR USE ONLY.

This Owner's Guide contains important information necessary for the proper assembly and safe use of the appliance.

Read and follow all warnings and instructions before assembling and using the appliance.



Q™ 1000™ Q™ 1200™

CE:845CO-0015
ID: 0845

Q™ 2000™ Q™ 2200™

CE:845CO-0016
ID: 0845

71728

EN - INTERNATIONAL ENGLISH
12/01/16

