

# MX-5500 EOS

Loosen the two screws on both sides of labeler close to letter head.

123456




123456



123456



Move them left or right as instructed on above diagram.  
**It's better not to change the position frequently.**

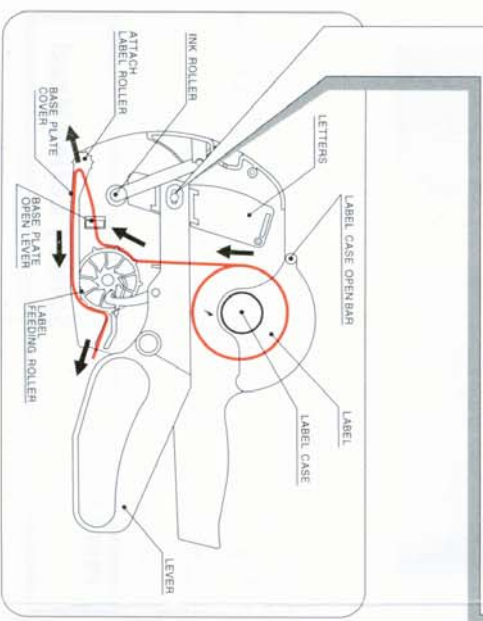

## CAUTIONS

- Do not drop the labeler from 1m or higher above the ground or do not expose it to places where shocks occur.
- The Labeler consists of A.B.S. and P.O.M. resin that are sensitive to chemical reactions, especially A.B.S. Do not expose to heat over 60 degrees Celsius (60°C).
- Do not inject general ink into Ink Roller. Special ink should be used for the product, otherwise the band will be damaged.

Ministry of Commerce, Industry & Energy  
 Small and Medium Business Administration

National Institute of Technology and Quality Certificate



**E.M. MARK** Excellent Machine Mechanism Material

Ministry of Commerce, Industry & Energy  
 Small and Medium Business Administration

National Institute of Technology and Quality Certificate



**N.T. MARK** New Technology

Ministry of Commerce, Industry & Energy Certificate for  
**THE WORLD WIDE CLASS CAPITAL GOODS**

Ministry of Commerce, Industry & Energy

Small and Medium Business Administration

National Institute of Technology and Quality Certificate




**PRICE LABELLER**  
**MX-5500**  
**EOS**

### Operating Instructions



1 Pull out **Label Case** as shown.

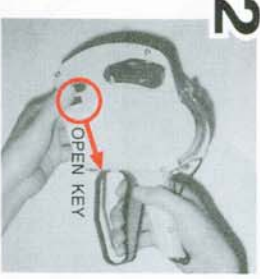

2 Pull out **Base Plate** by pulling back **Plate Open Keys** on both sides of labeller.



3 Load **Label** onto **Label Hanger** inside of **Label Case**.





4 Insert **Roll** into **Tunnel** above **\*LABEL\*** sign until you see 10cm of label paper coming out of the bottom. Then close **Label Roll Cover**.



5 Close **Base Plate**.



6 Line up **Holes** with **Feed Roller's sprocket pins** : prominent parts.

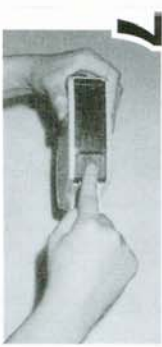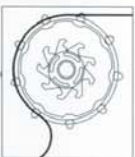


7 Close **Base Plate Cover**. Be careful not to detach stickers of label.



8 Squeeze and release lever three times for trial. Then the labels come out. Attach labels by **sliding** it onto a desired place of product.

ATTACH LABEL ONTO DESIRED PLACE OF PRODUCT.


### Replacing Ink Roller

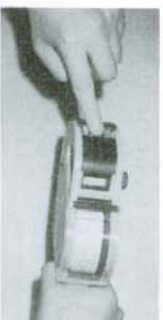

Press and pull apart **Ink Roller Case**.



 Pull **Ink Roller Holder** by its grip.



\* Widen **Ink Roller Holder's** sides, and replace **Ink Roller** with a new one.

### Setting Letter Head



1. Pull out or push in **Dial Shaft** to a desired digit of **letter-band** then turn the shaft.
2. After you set up all letters, push in the shaft completely.

